


FOR
FRONT LEFT
REAR RIGHT


Ax (4)



M8 (x8)

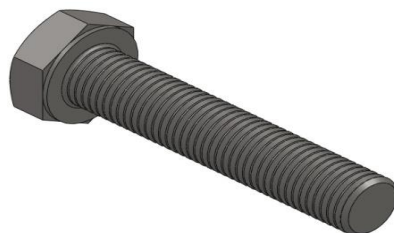

Bx (8)
M8x25

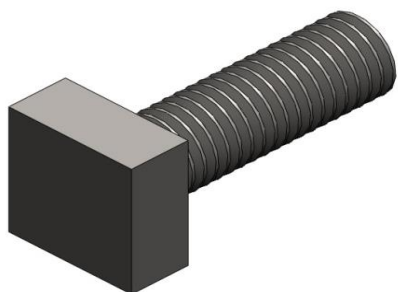

M8 (x8)



M8 (x8)



HONDA CRV 2013-2018 RUNNING BOARD



instructions

