


A (x2)



**FORD CUSTOM 2013 →
REAR BAR**

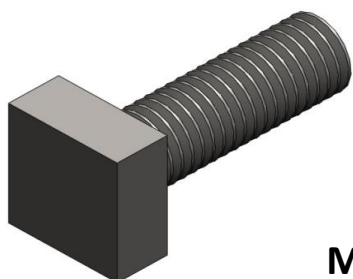

M8
(x2)



M8
(x2)

instructions

LEFT

RIGHT

