

Cross Bars Installation Instruction


FOR Cherokee 2014-2023

NO.	ITEM	QTY
①	Front Crossbar	x 1
②	Rear Crossbar	x 1
③	Clamp	x 4
④	Instruction	x 1
⑤	Wrench	x 1
⑥	2 screws +1 washer	x 1



Step 1.

Take out the screws on the cross bar. Assemble the left/right end base and middle bar. Don't tighten the screws first.

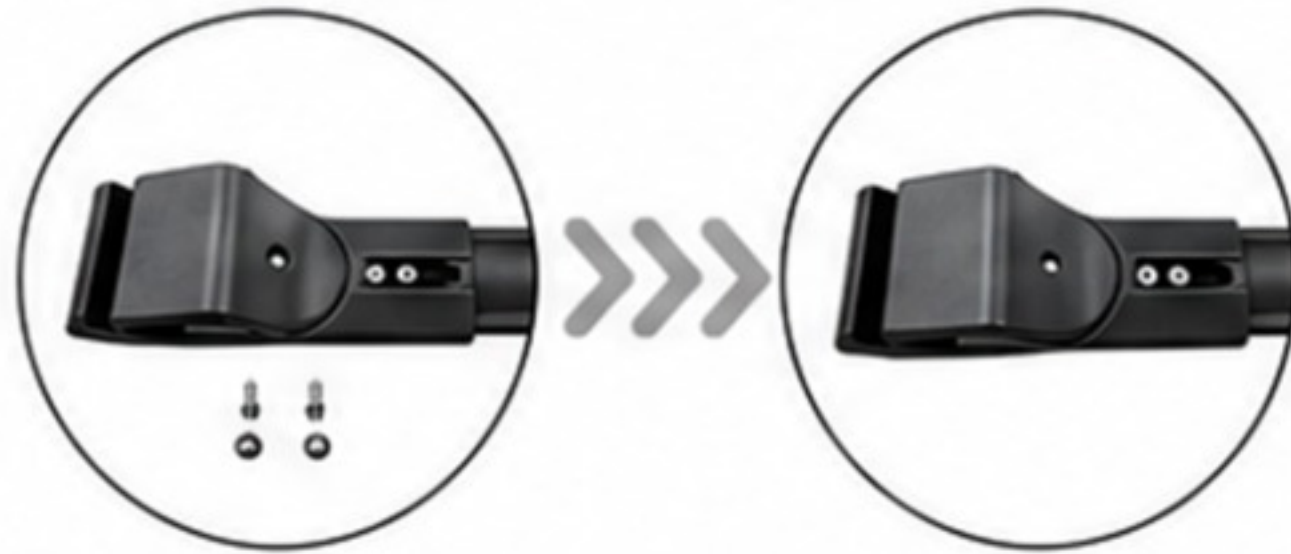

Step 2.

The length of the cross bar can be adjusted (right side)



Step 3.

Assemble the four end bases of the cross bar in the same way. After adjusting the length of the cross bar, tighten the screws.




- The round side of the bar faces to the front, and the pointy side faces to the rear (with arrow label)
- The base is marked with "L" and "R", "L" means left base, "R" means right base




Step 4.

Loosen the screw (do not remove).

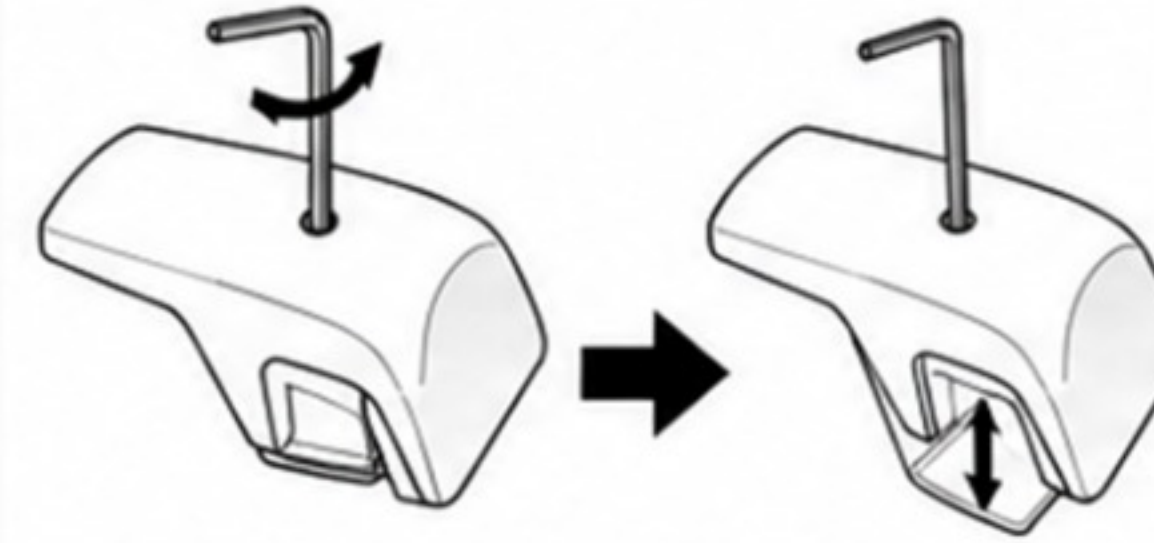

Step 5.

Swing lower clamp into position under side rail. Tighten the screw.

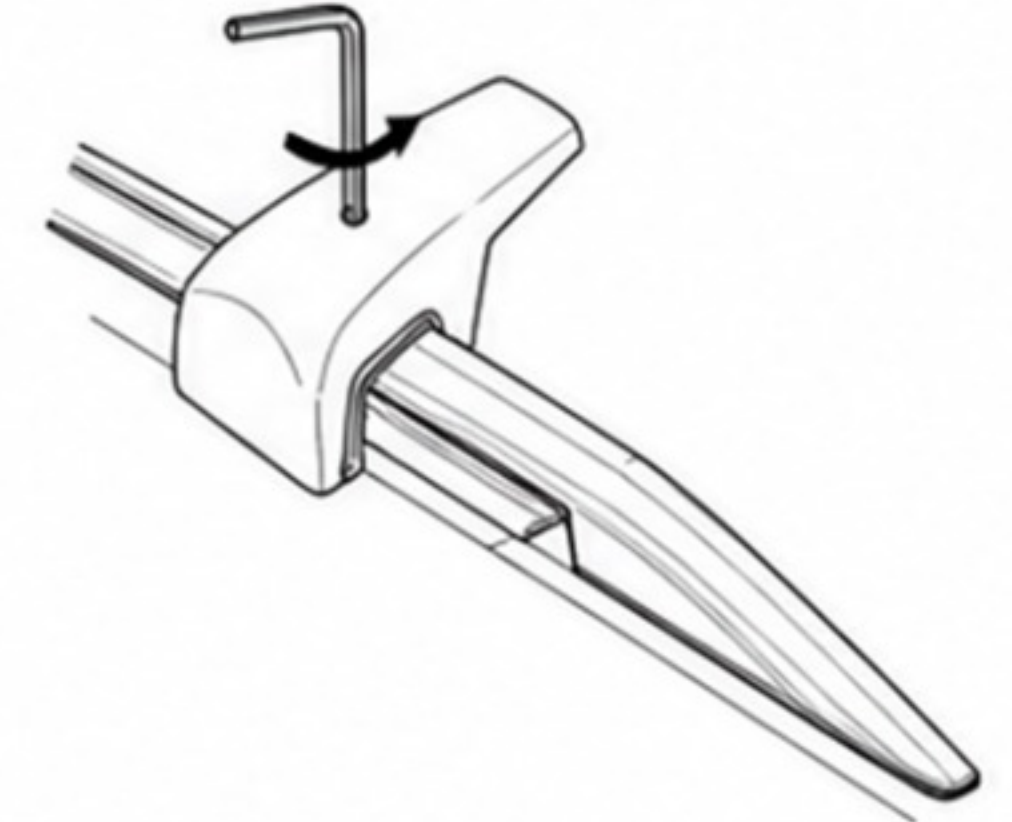

NOTE:

- Please double-check the package box when you open the package to see if all the parts are packed in the box, if not, please contact us and we will send you the replacements soon.
- Place a towel or mat before installation to prevent damage to the car roof.
- The weight of the cargo must not exceed the maximum weight limit.
- Check the cross bar mounting bolts frequently for security, re-tighten it if necessary.