



CROSS BAR USERS MANUAL

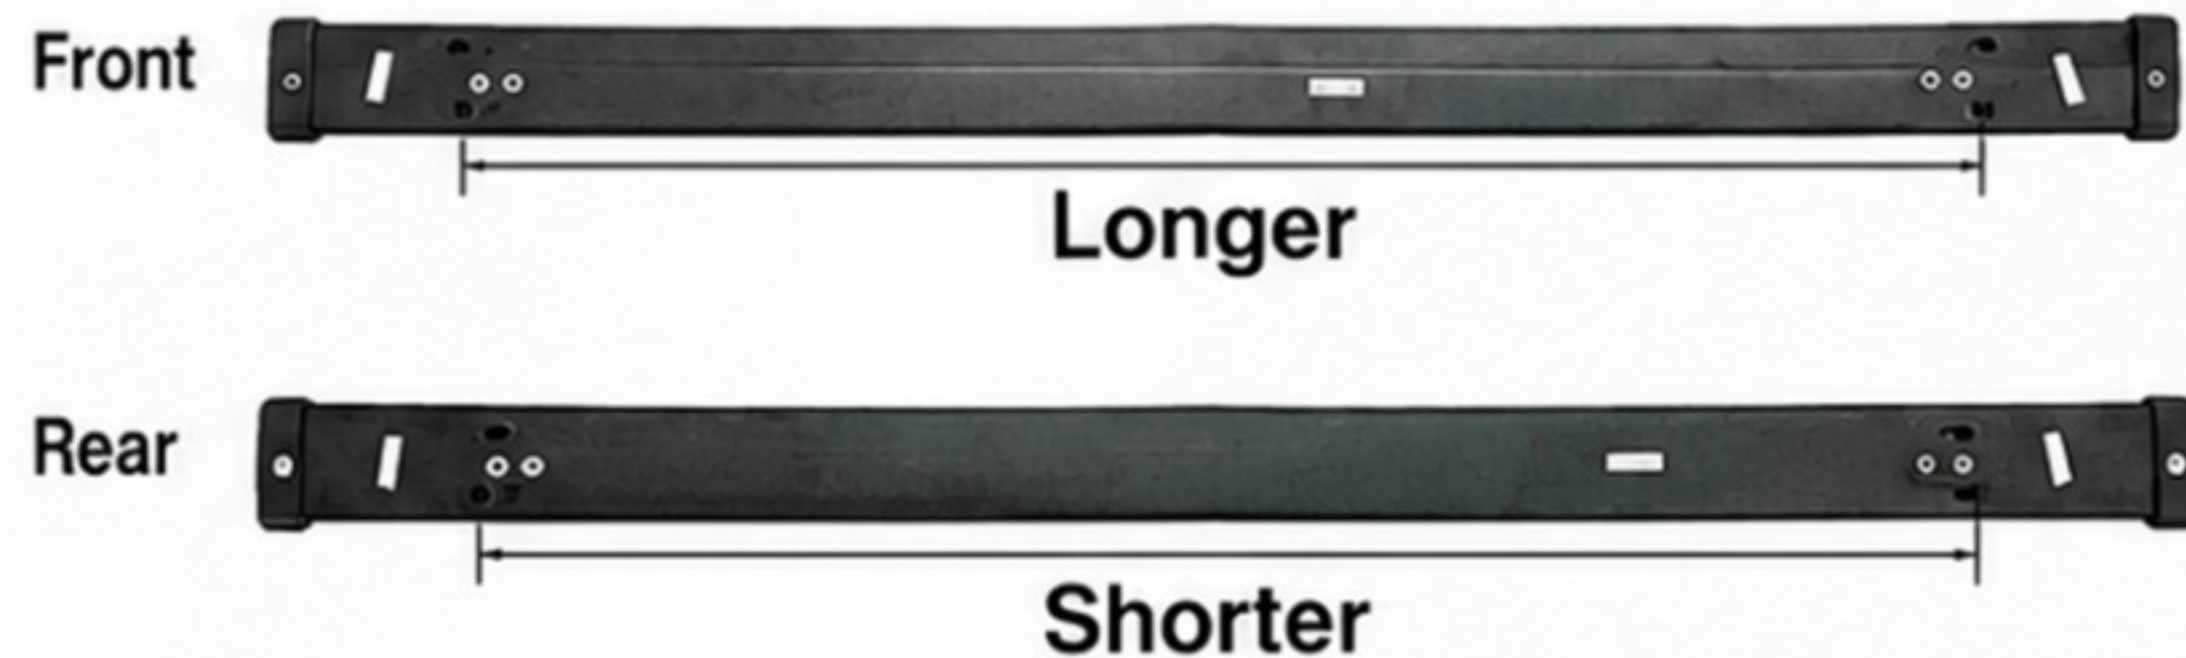

front of vehicle

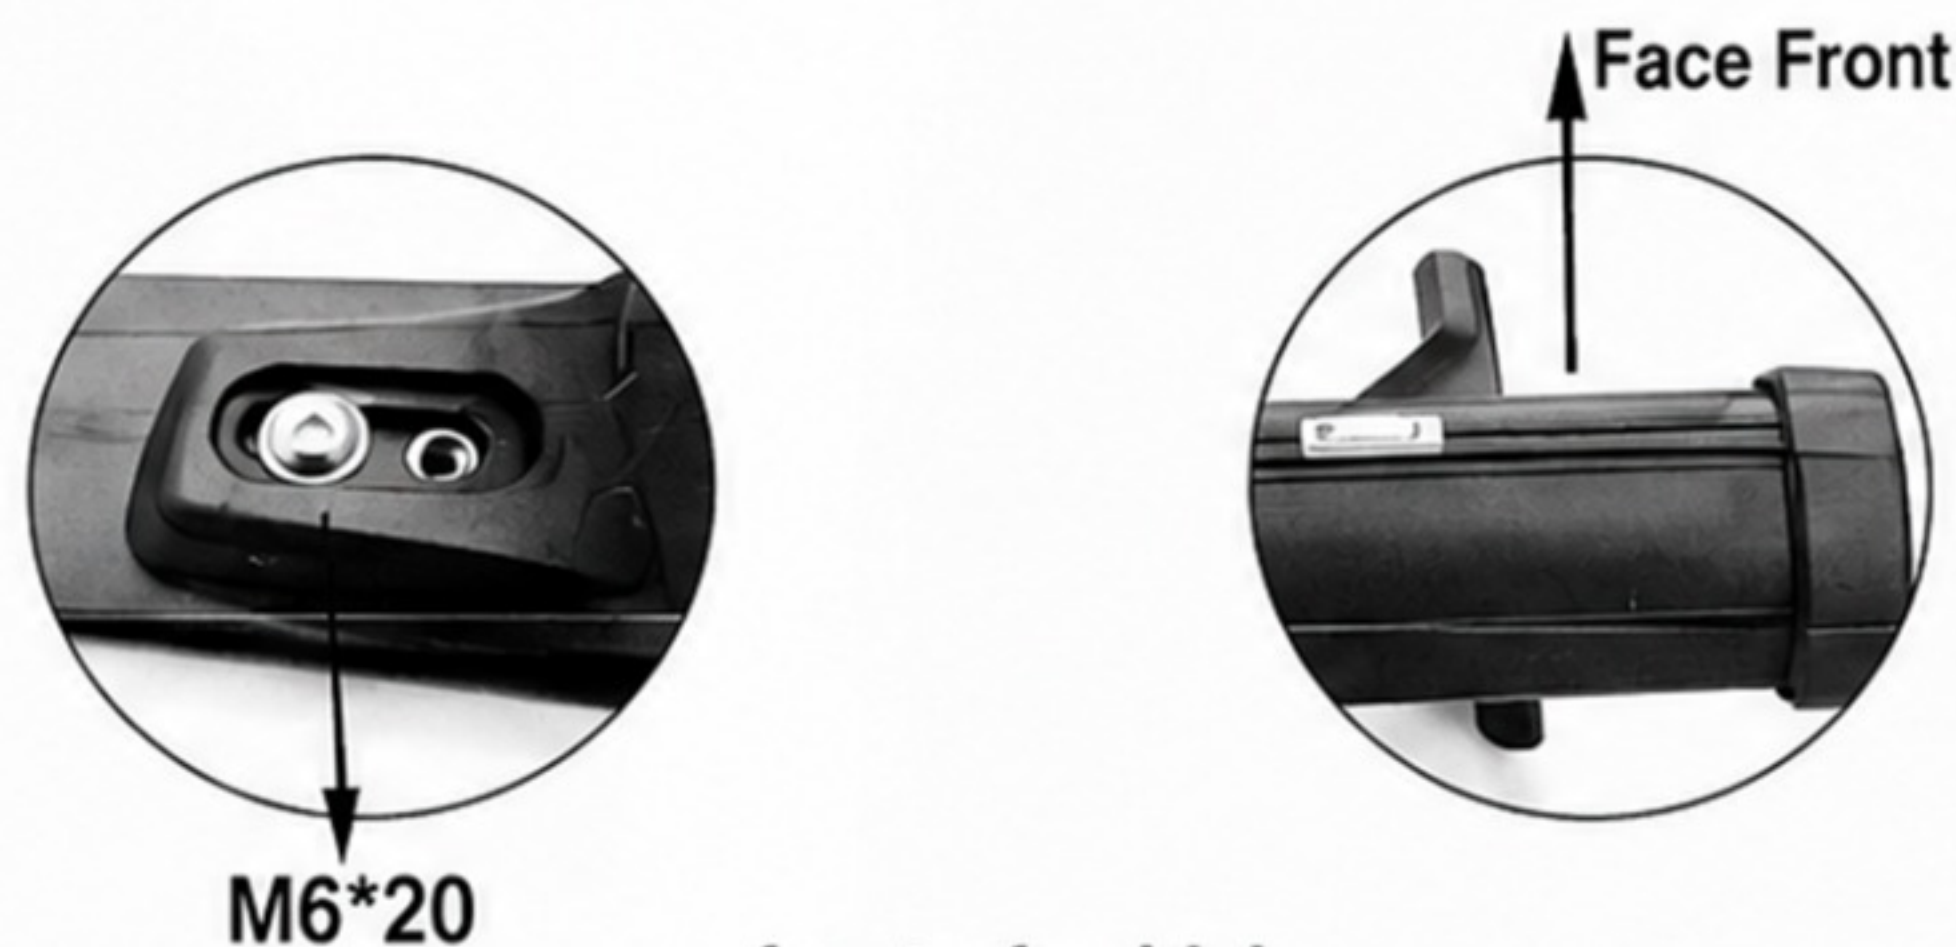

Tools Required:


Flat Head Screw Driver

Pry Tool

Procedure:

Warning: The load you are carrying plus the weight of the rack must not exceed the maximum weight of 165 lbs.

Note: This installation requires 2 people for proper installation to avoid vehicle damage.

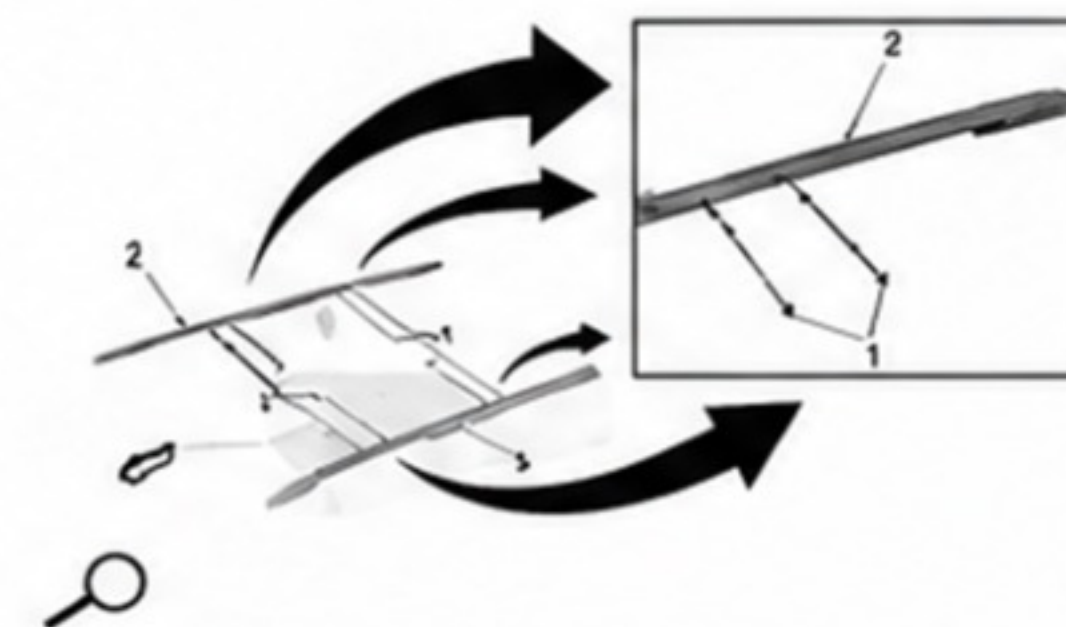


1. Remove the 8 plugs (1) from Roof Rails (2) twisting the plugs counter clockwise by hand or remove the plug by using a pry tool.




2. Line up the holes from front (1) and rear (2) (Cross Rails) with the holes in the side Rails. Install (8-M6*25 bolts) (3) Gaskets (5) through the Cross Rails and into the Roof Rails.

Note: The arrows on the Cross Rails face the front of the vehicle.

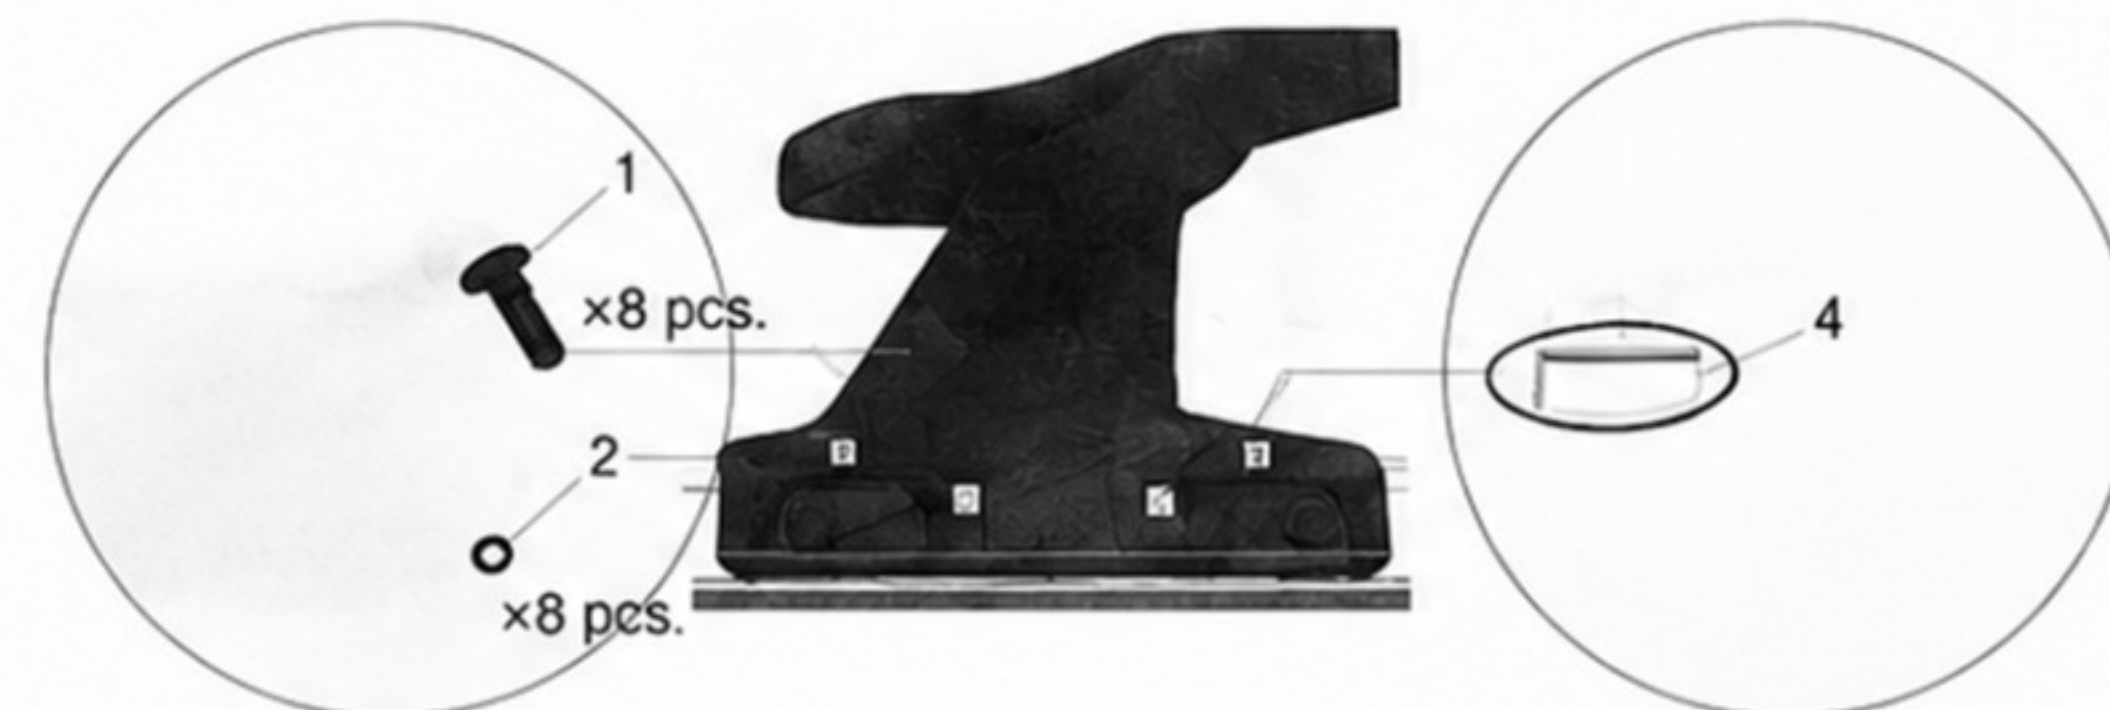

3. Use item (Allen Key) (4) to tighten all 8 of (M6*25 bolts) (1) Gaskets (2). The torque about (8 N.m)

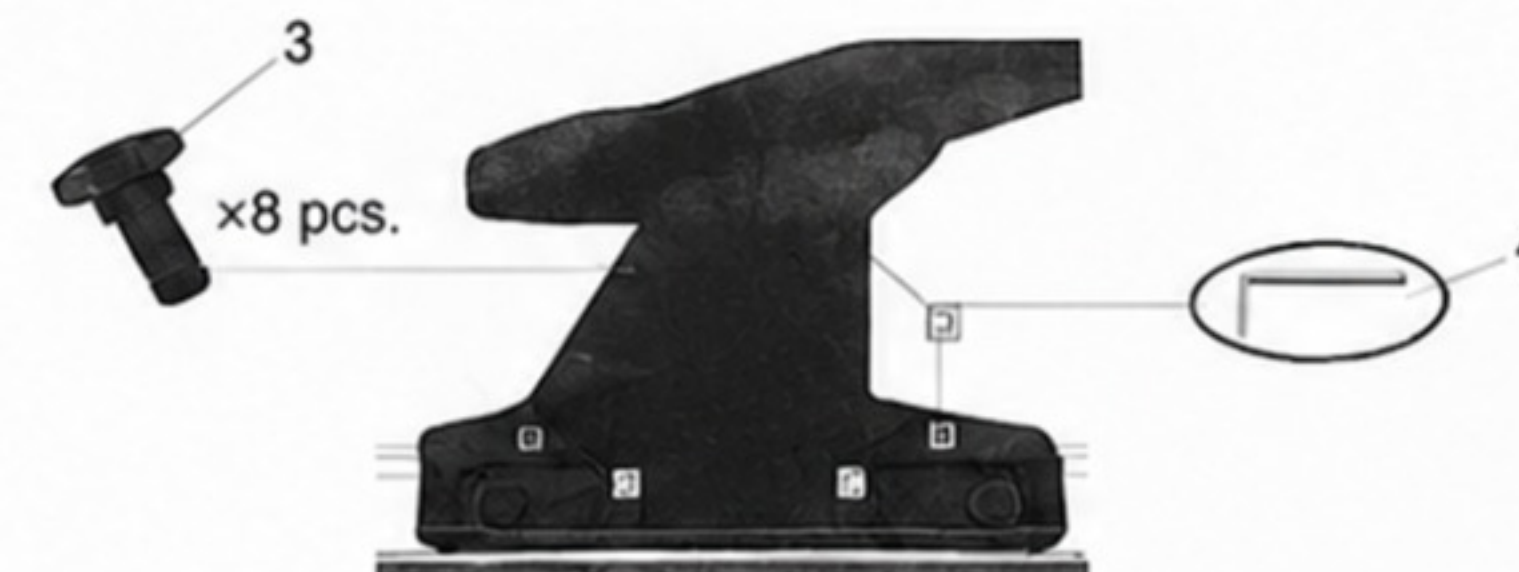

4. Install the M6 set bolts (3) located (Two set screws per cross rail) into the underside of each cross rail with supplied Allen Key (4). Tighten bolt with appropriate torque about (8 N.m)