



Step 10

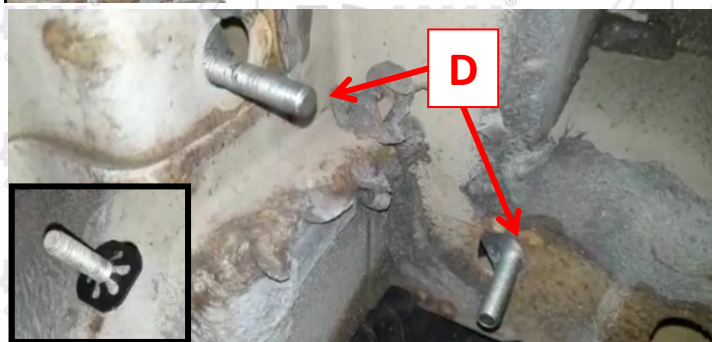

Step 11



Step 12

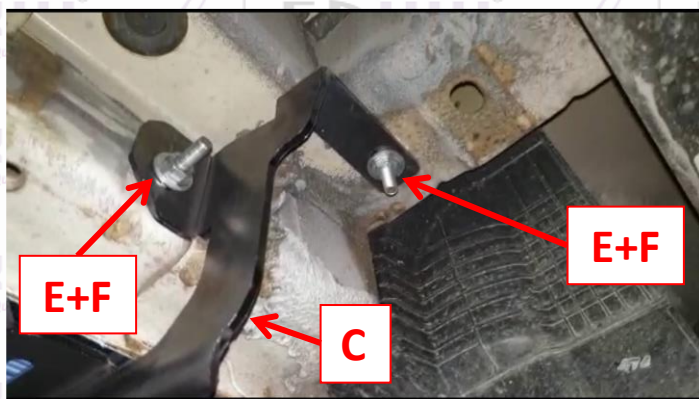

eh

**ERKUL**<sup>®</sup>  
Products & Quality



## FORD CUSTOM 2013 → RUNNING BOARD

Montaj talimatı:

Fitting Instructions:

Montageanleitung:

Montagevoorschrift:

Instructions de montage:

Instrucciones de montaje:

Schema di montaggio:

Manual:

РУКОВОДСТВО ПО МОНТАЖУ: ПОРОГИ ТРУБООБРАЗНЫЕ

YAN BASAMAK

SIDE BAR

SCHWELLERROHR

SIDE BAR

MARCHE-PIEDS

JUEGO PROT. DE PARA. TRASERA

PEDANE LATERALI

SIDOFOTSTEG



FIRST QUALITY CERTIFICATION

ISO 9001:2008



Deutsche  
Akkreditierungsstelle  
D-ZM-19276-01-00

# instructions



Gerekli ekipmanlar / Required tools / Benötigte Werkzeuge / Benodigde werktuigen / Outillage requis Herramientas necesarias / Utensile necessarie / Verktug somsomkrävs / Необходимые инструменты




10



13

### Step 8

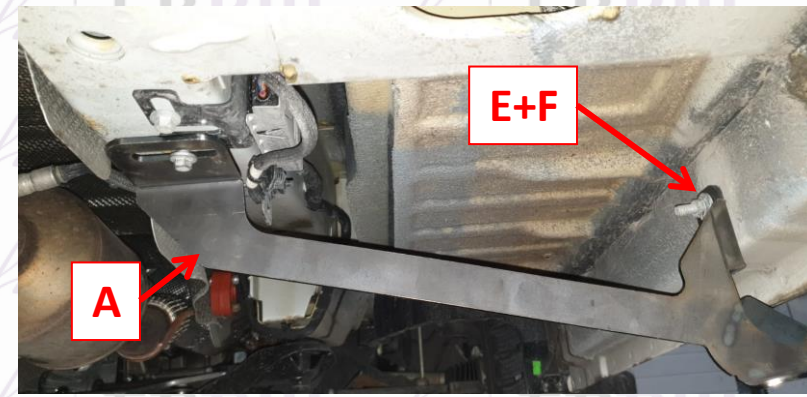

Parça listesi / Parts list / Teileliste / Onderdelenlijst / Liste de pièces Lista de accesorios / Lista di pezzi / Artikel lista / Список частей

### Step 9



**FOR FRONT RIGHT**

**FOR MIDDLE RIGHT**

A (x2)

B (x2)


**FOR REAR RIGHT**

C (x2)




D (x10)

M8

### Step 9

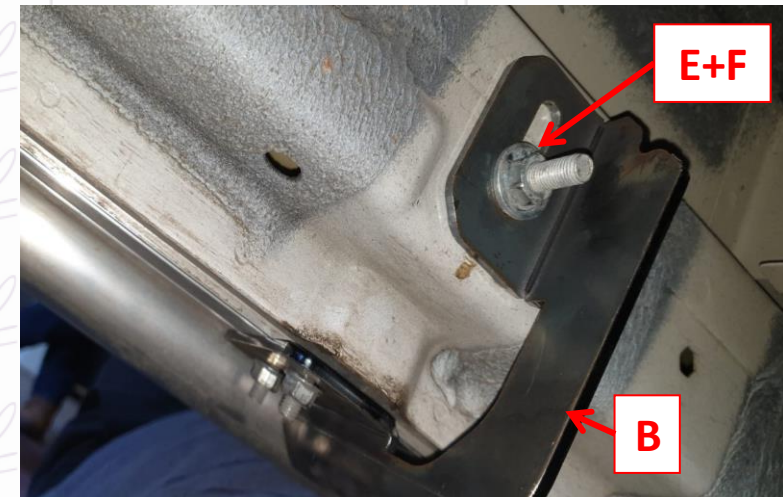

### Step 5

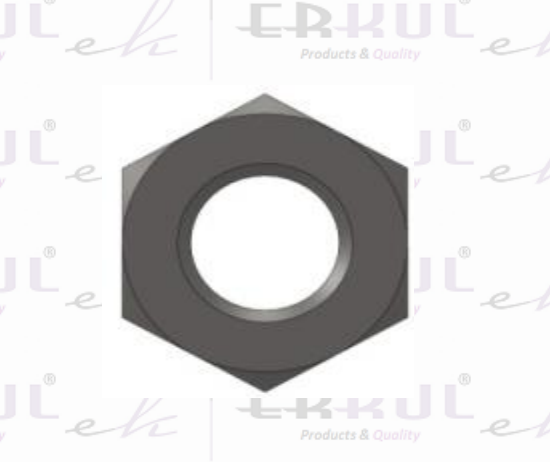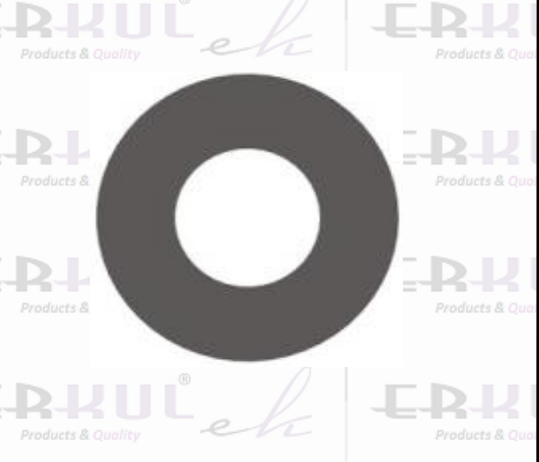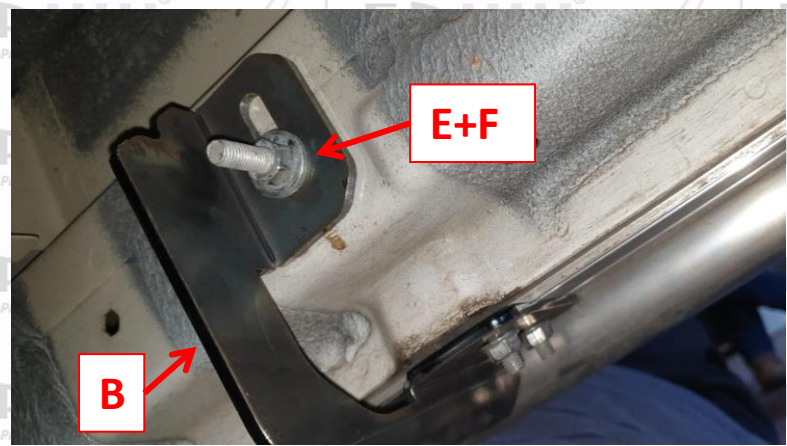

E (x10)

M8

F (x10)

M8

### Step 6





G (x12)


M8

H (x12)

M8

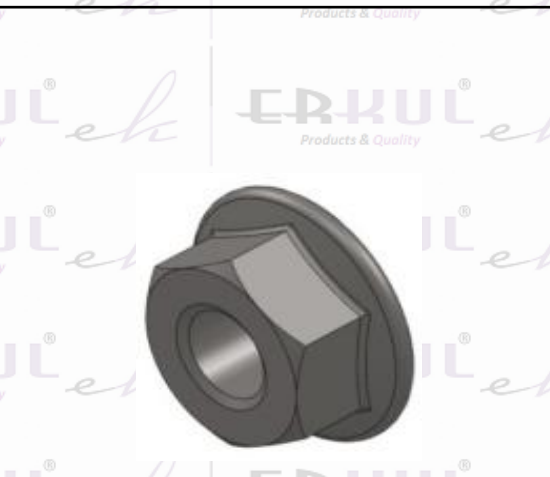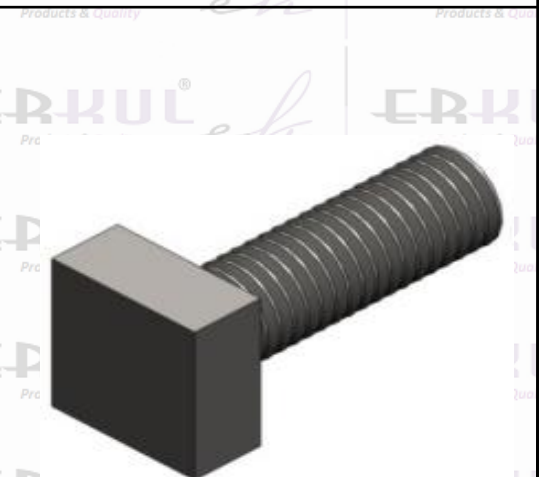

### Step 7

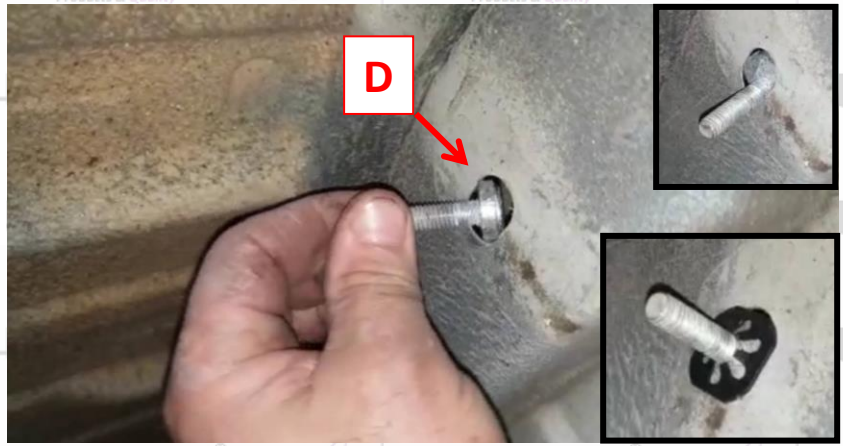

G (x12)

M8

H (x12)

M8



### Step 1




### Step 2



### Step 1



### Step 3

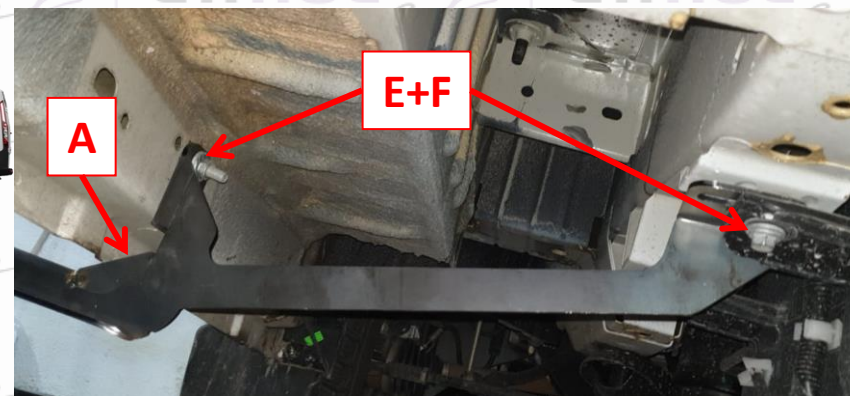

### Step 1



### Step 4

