




A (x6)

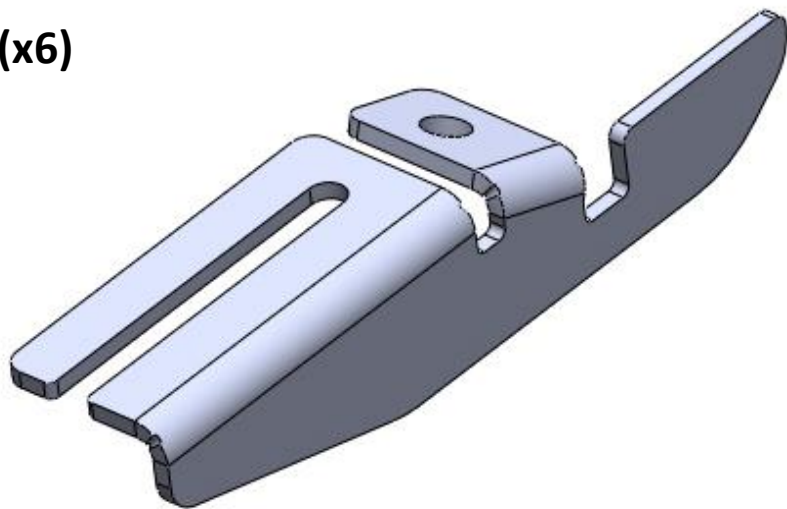


B (x6)
M10

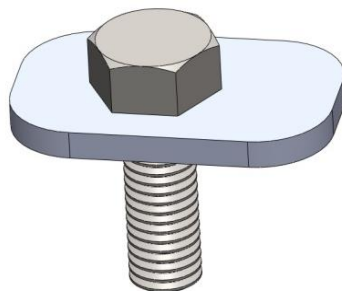

M8 (x12)

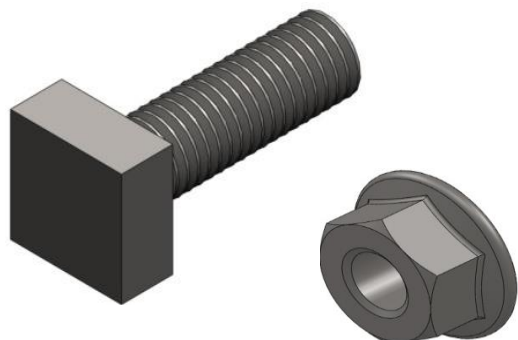

M10 (x6)

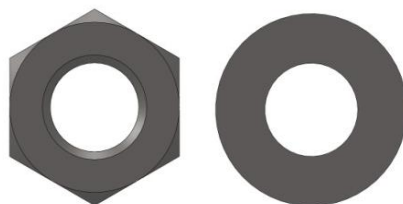

ERKUL[®]
Products & Quality



RENAULT CAPTUR 2013-209 RUNNING BOARD



instructions

