

RENAULT CAPTUR 2013-2019 RUNNING BOARD

Montaj talimatı:	YAN BASAMAK
Fitting Instructions:	SIDE BAR
Montageanleitung:	SCHWELLERROHR
Montagevoorschrift:	SIDE BAR
Instructions de montage:	MARCHE-PIEDS
Instrucciones de montaje:	JUEGO PROT. DE PARA. TRASERA
Schema di montaggio:	PEDANE LATERALI
Manual:	SIDOFOTSTEG
РУКОВОДСТВО ПО МОНТАЖУ:	ПОРОГИ ТРУБООБРАЗНЫЕ



Gerekli ekipmanlar / Required tools / Benötigte Werkzeuge / Benodigde werktuigen / Outillage requis Herramientas necesarias / Utensile necessarie / Verktug somsomkrävs / Необходимые инструменты



13



17


Parça listesi / Parts list / Teileliste / Onderdelenlijst / Liste de pièces Lista de accesorios / Lista di pezzi / Artikel lista / Список частей

FOR FRONT RIGHT

FOR REAR RIGHT


A (x2)

B (x2)

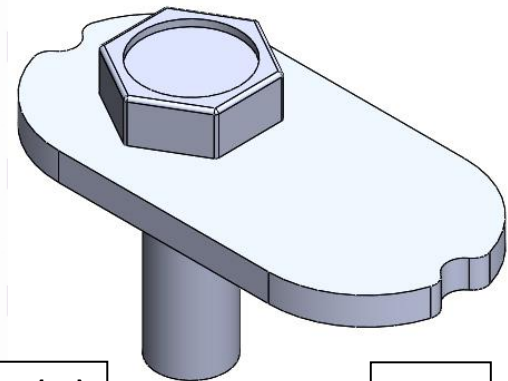

C (x6)

M10

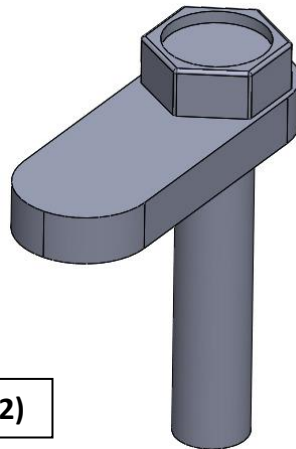


D (x2)

M8

Step 7



RIGT/LEFT

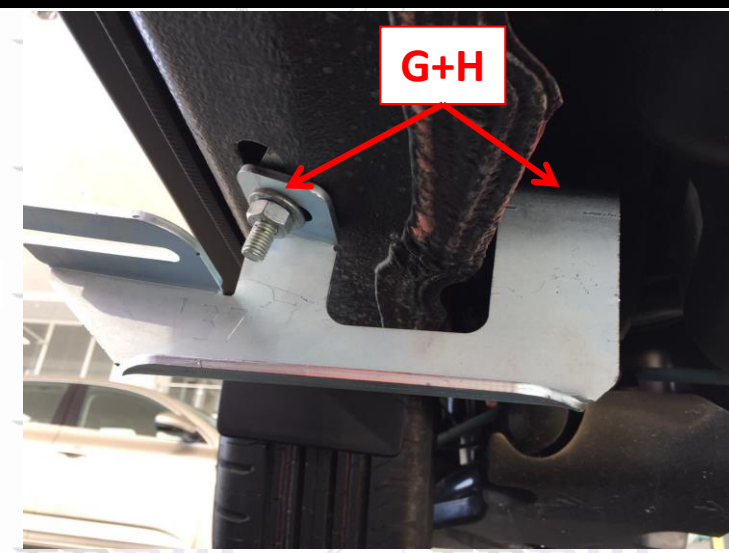


G+H

Step 8



RIGT/LEFT

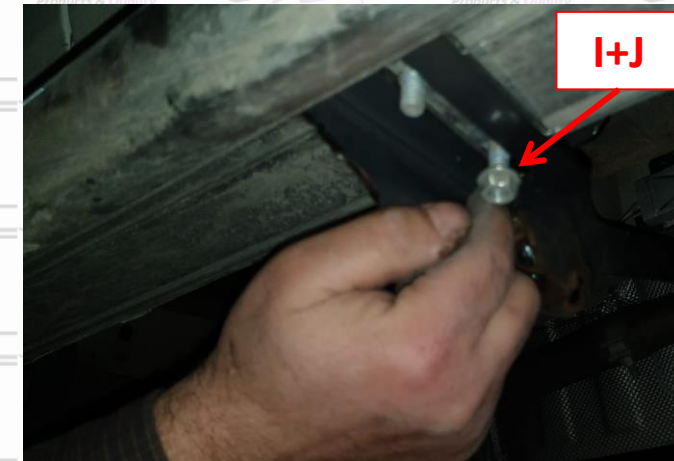

I+J

Step 9



RIGT/LEFT



I+J

Step 7




RIGT/LEFT



M8: E (x2)
M10: G (x6)



M8: F (x2)
M10: H (x6)

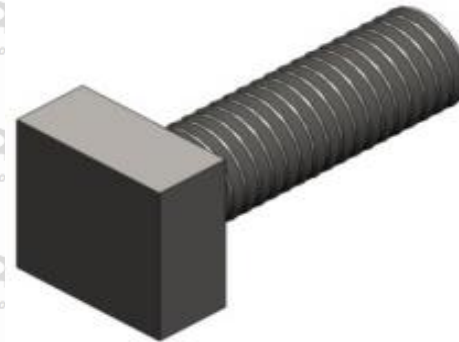

I (x8)

M8




J (x8)

M8




K (x8)

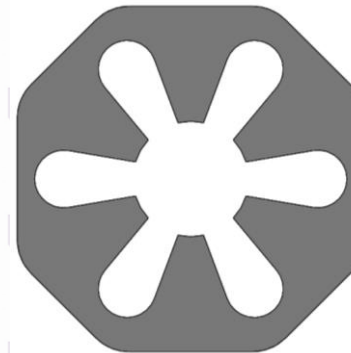

Step 1



RIGT/LEFT

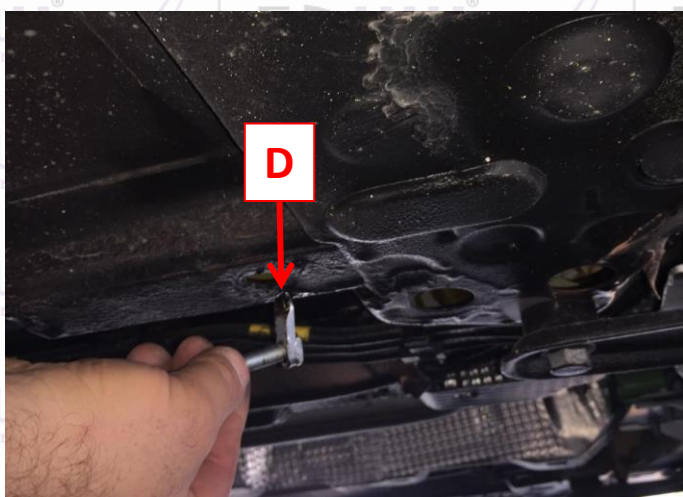


D

Step 4



RIGT/LEFT

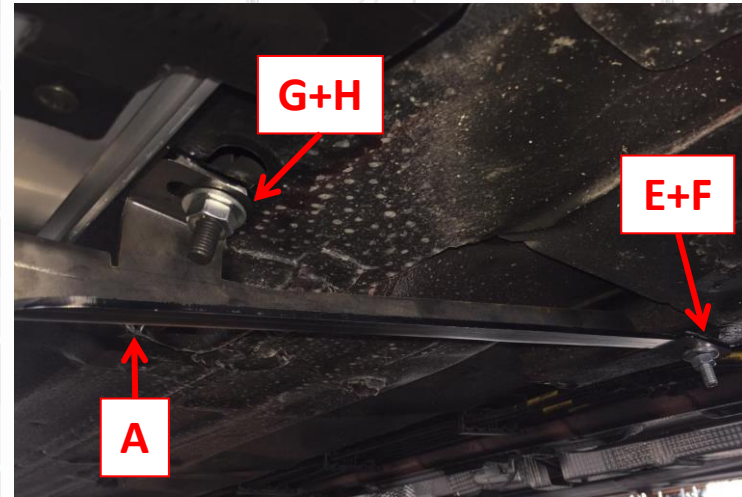

A


G+H

E+F

Step 2



RIGT/LEFT

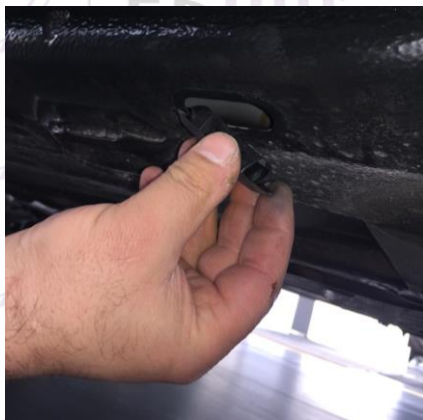

Step 5



RIGT/LEFT



C

Step 3



RIGT/LEFT



C

Step 6



RIGT/LEFT

