

Step 13



RIGHT/LEFT




D+E

Step 14



RIGHT/LEFT

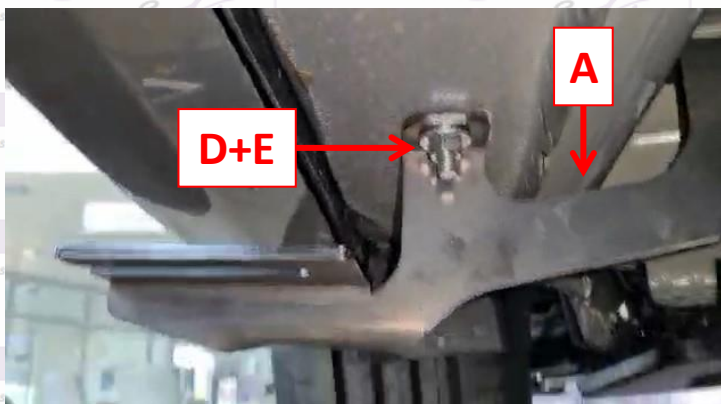

D+E

A

Step 15



RIGHT/LEFT



FORD PUMA 2019 → RUNNING BOARD

Montaj talimatı:

Fitting Instructions:

Montageanleitung:

Montagevoorschrift:

Instructions de montage:

Instrucciones de montaje:

Schema di montaggio:

Manual:

РУКОВОДСТВО ПО МОНТАЖУ: ПОРОГИ ТРУБООБРАЗНЫЕ

YAN BASAMAK

SIDE BAR

SCHWELLERROHR

SIDE BAR

MARCHE-PIEDS

JUEGO PROT. DE PARA. TRASERA

PEDANE LATERALI

SIDOFOTSTEG



Deutsche
Akkreditierungsstelle
D-ZM-19276-01-00

Gerekli ekipmanlar / Required tools / Benötigte Werkzeuge / Benodigde werktuigen / Outillage requis Herramientas necesarias / Utensile necessarie / Verktÿg somsomkrävs / Необходимые инструменты




13




17

Parça listesi / Parts list / Teileliste / Onderdelenlijst / Liste de pièces Lista de accesorios / Lista di pezzi / Artikel lista / Список частей

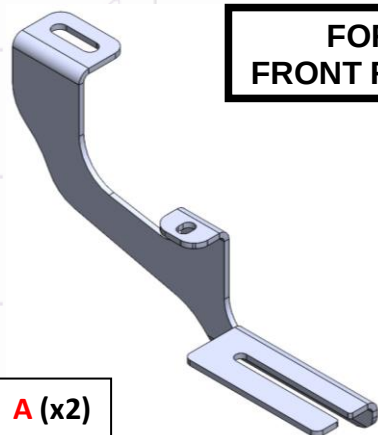


FOR
FRONT RIGHT

A (x2)

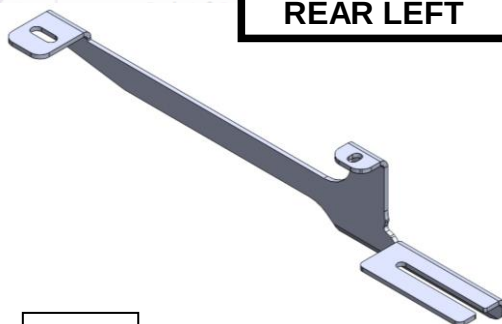

FOR
REAR LEFT

B (x2)

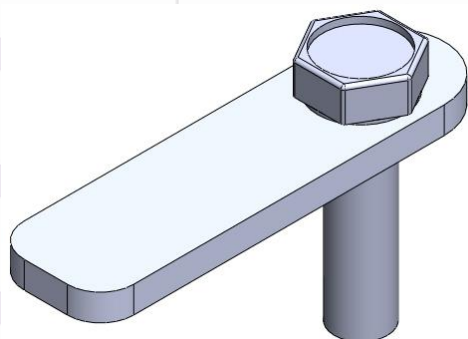

C (x6)

Step 10



RIGHT/LEFT



Step 11



RIGHT/LEFT



Step 12



RIGHT/LEFT



Step 7



RIGHT/LEFT



M8: **D** (x6)




M8: **E** (x6)


Step 8



RIGHT/LEFT

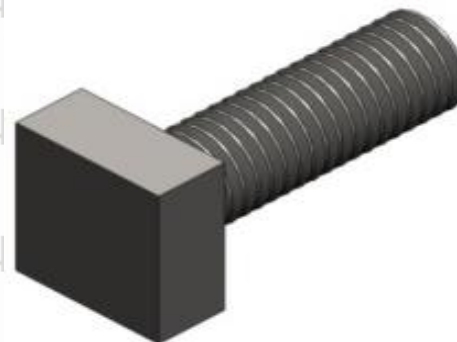

F (x8)

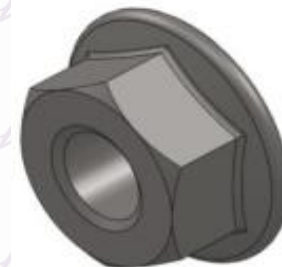

G (x8)

M8

M8

Step 9



RIGHT/LEFT



Step 1



RIGHT/LEFT



Step 4



RIGHT/LEFT



Step 2



RIGHT/LEFT



Step 5




RIGHT/LEFT



Step 3



RIGHT/LEFT

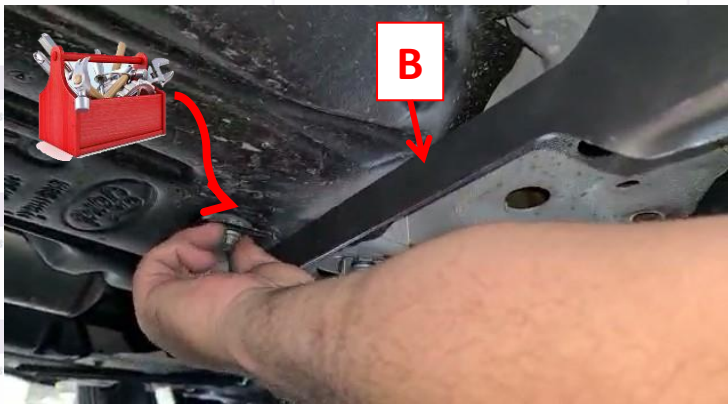

Step 6



RIGHT/LEFT

