



for middle
(x2)

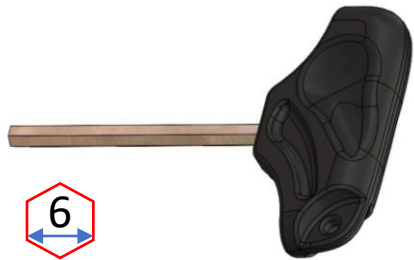


for middle
(x2)



(x6)

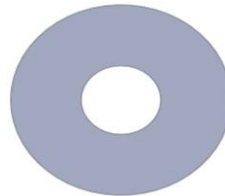

M8 (x6)

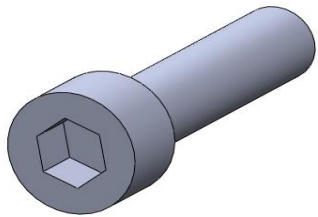

M8x50 (x2) for front

M8x60 (x2) for middle

M8x40 (x2) for rear



silicon
(x1)





ERKUL[®]
Products & Quality



FORD CUSTOM SWB 2013 → SKYPORT ROOF RAIL




instructions

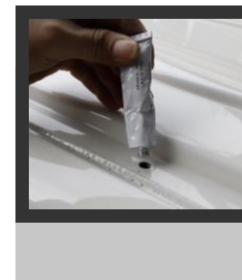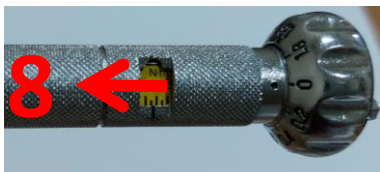


Put the cilicon
before tighten
up to the screws.

FRONT

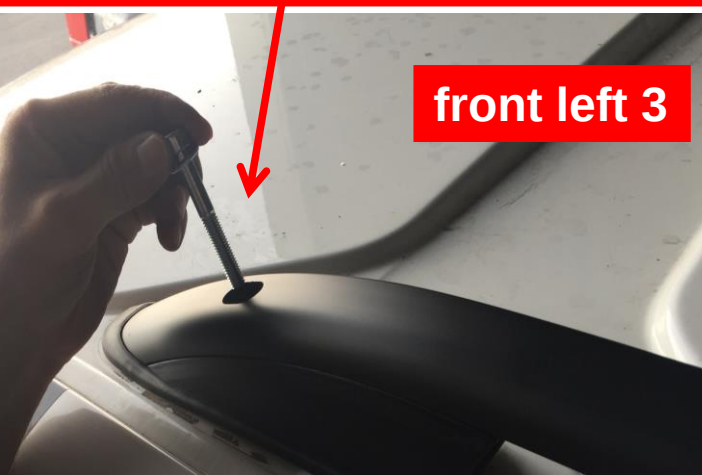

MIDDLE

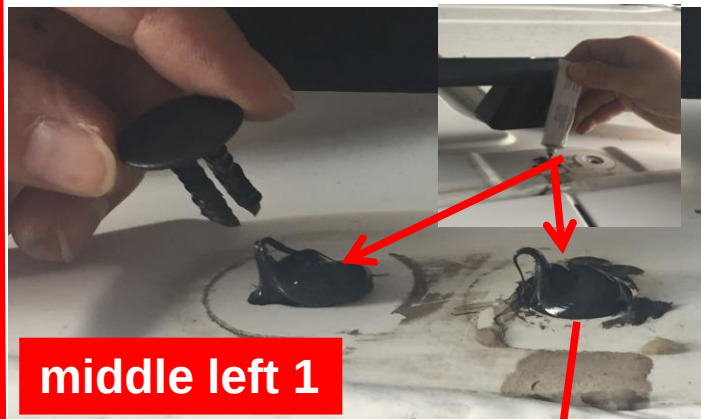

REAR

