



(x2)



5

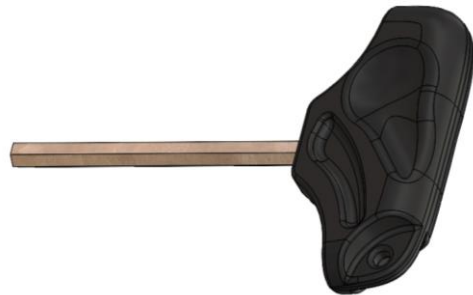


(x6)

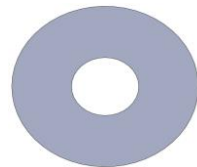

M8 (x6)

M8x50 (x2) **for front**
M8x60 (x2) **for middle**
M8x30 (x2) **for rear**

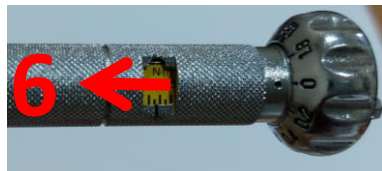


ERKUL[®]
Products & Quality



RENAULT KANGOO MAXI 2008 → SKYPORT ROOF RAIL




instructions

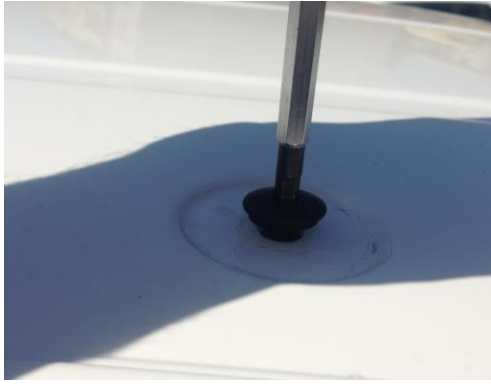


**Cıvataları
sıkmadan önce
silikon sıkın.
Put the cilicon
before tighten
up to the screws.**

(REAR)

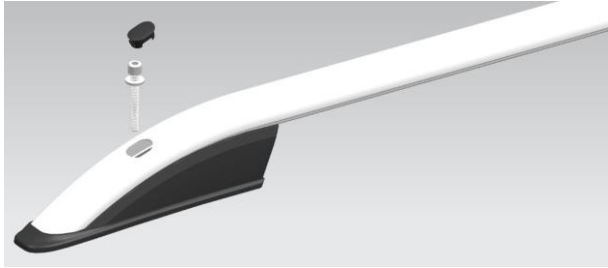

(MIDDLE)

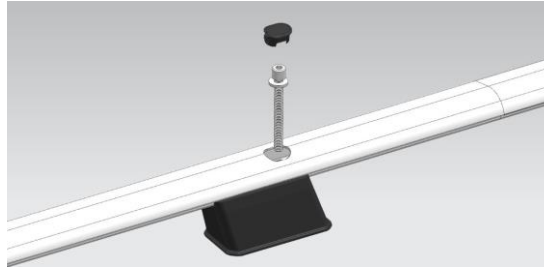

(FRONT)

