



(x2)

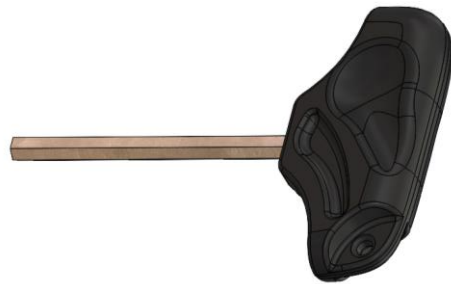

5




(x4)

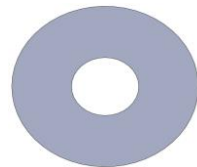

M8 (x4)

M8x50 (x2) for front

M8x30 (x2) for rear

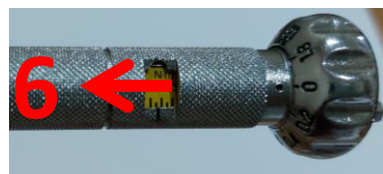


ERKUL[®]
Products & Quality



RENAULT KANGOO 1998-2008 SKYPORT ROOF RAIL



instructions

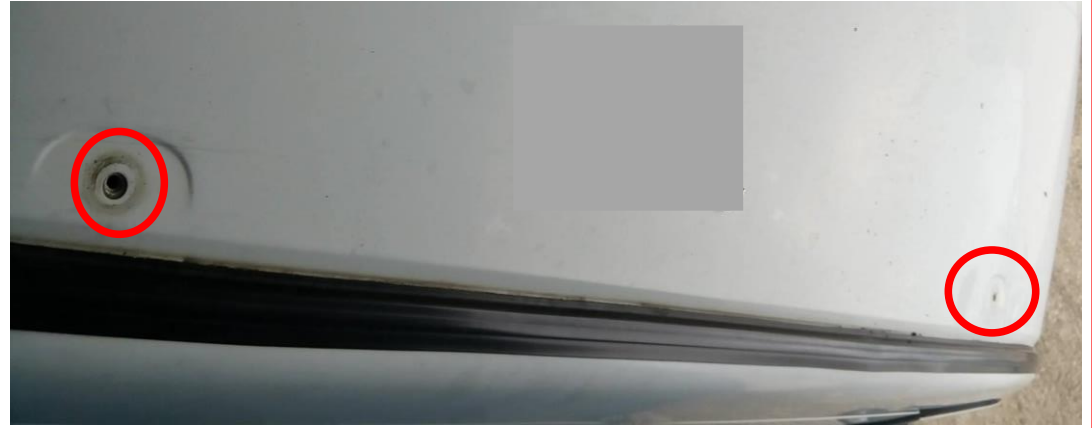

Cıvataları
sıkmadan önce
silikon sıkın.
Put the cilicon
before tighten
up to the screws.

